
May 1, 2016 Lit. No. 84913, Rev. 00

# **Shoe Kit**

# Flared-Wing V-Plow Snowplows

# **PARTS LIST**

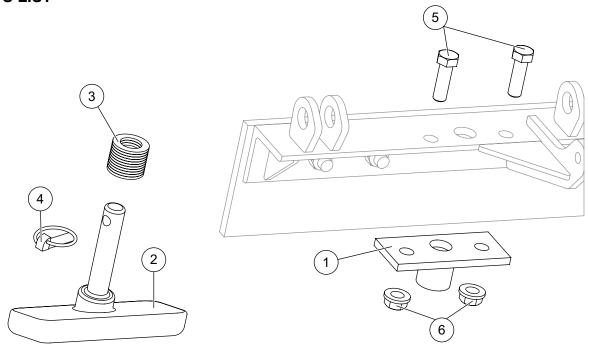

43088 Shoe Kit – V-Plow							
Item	Part	Qty	Description	Item	Part	Qty	Description
1	29743	2	Shoe Bracket	4	93010K	1	7/16 x 1-3/4 Linchpin (pkg of 2)
2	50695	2	Shoe – Rectangle, Solid Cast	ns	50697	1	Bolt Bag
3	91192	18	Flat Washer, Special				
50697 Bolt Bag							
5		4	5/8-11 x 2 Hex Cap Screw G5	6		4	5/8-11 Hex Flange Locknut GC
ns = not shown							G = Grade

#### **A** WARNING

Do not exceed GVWR or GAWR, including blade and ballast. The rating label is found on the driver-side vehicle door cornerpost.

#### **A** CAUTION

Read this document before installing the Shoe Kit.

# **A** CAUTION

Use standard methods and practices when attaching snowplow and installing accessories, including proper personal protective safety equipment.

#### **A** CAUTION


See your sales outlet/Web site for specific vehicle application recommendations before installation. The online selection tool has specific vehicle and snowplow requirements.

# **INSTALLATION INSTRUCTIONS**

- Park the vehicle on a smooth, level, hard surface, such as concrete. Raise the blade, then turn the control OFF.
- 2. From the side of the blade assembly, place jack stands or sturdy blocking under the T-frame.
- Turn the control ON and lower the blade onto the jack stands or blocking. Turn the control OFF.
   Turn the vehicle ignition to the "OFF" position and remove the key.
- 4. Orient the shoe bracket so the bracket holes align with the holes in the base angle.

NOTE: All three holes in the bracket must line up with the three holes in the base angle.


5. Insert a 5/8" x 2" cap screw through each of the two outer holes in the shoe bracket and base angle. Attach a 5/8" locknut and tighten to 150 ft-lb.

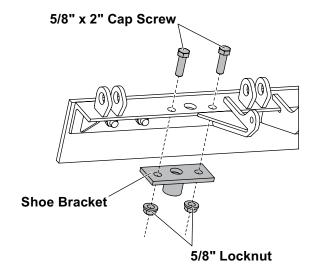

the center hole in the shoe bracket and base angle. Secure with a linchpin.

Linchpin

 Determine the desired height of the cutting edge from the ground. Place the appropriate number of flat washers on the shoe and insert it up through

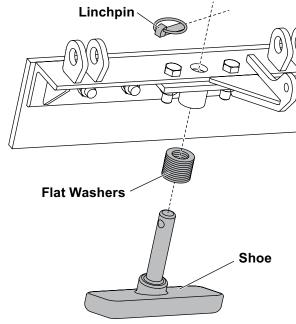

8. Repeat for the opposite side.

6. Repeat for the opposite side.

Copyright © 2016 Douglas Dynamics, LLC. All rights reserved. This material may not be reproduced or copied, in whole or in part, in any printed, mechanical, electronic, film or other distribution and storage media, without the written consent of the company. Authorization to photocopy items for internal or personal use by the company's outlets or snowplow owner is granted.

The company reserves the right under its product improvement policy to change construction or design details and furnish equipment when so altered without reference to illustrations or specifications used. This equipment manufacturer or the vehicle manufacturer may require or recommend optional equipment for snow removal. Do not exceed vehicle ratings with a snowplow. The company offers a limited warranty for all snowplows and accessories. See separately printed page for this important information.